

PRODUCT DATA SHEET

**AMBERJET™ I 200 Na**  
**Industrial Grade Strong Acid Cation Exchanger**

AMBERJET 1200 Na resin is a uniform particle size, high quality, strong acid cation exchanger designed for use in all water treatment applications: softening as well as demineralisation. The uniformity and mean particle size of AMBERJET 1200 Na resin have been optimised for use in industrial equipment. In

H<sup>+</sup> cycle, it can be used in mixed bed applications paired with AMBERJET 4200 Cl resin. AMBERJET 1200 Na resin can be directly substituted for conventional gel cation exchange resin in new equipment and in rebeds of existing installations.

**PROPERTIES**

Physical form _____	Amber spherical beads
Matrix _____	Styrene divinylbenzene copolymer
Functional group _____	Sulfonic acid
Ionic form as shipped _____	Na <sup>+</sup>
Total exchange capacity <sup>[1]</sup> _____	≥ 2.00 eq/L (Na <sup>+</sup> form)
Moisture holding capacity <sup>[1]</sup> _____	43 to 47 % (Na <sup>+</sup> form)
Shipping weight _____	850 g/L
Specific gravity _____	1.26 to 1.30 (Na <sup>+</sup> form)
Particle size	
Uniformity coefficient <sup>[1]</sup> _____	≤ 1.2
Harmonic mean size _____	0.57 - 0.67 mm
< 0.300 mm <sup>[1]</sup> _____	0.1 % max
Maximum reversible swelling _____	Na <sup>+</sup> → H <sup>+</sup> < 10 %

<sup>[1]</sup> Contractual value  
 Test methods are available on request.

**SUGGESTED OPERATING CONDITIONS**

Maximum operating temperature _____	135 °C
Minimum bed depth _____	800 mm
Service flow rate _____	5 to 50 BV*/h
Maximum service velocity _____	60 m/h
Regeneration	
Regenerant _____	NaCl      HCl      H <sub>2</sub> SO <sub>4</sub>
Level (g/L) _____	50 to 240    40 to 150    40 to 200
Concentration (%) _____	10            4 to 10      1 to 8
Minimum contact time _____	20 minutes
Slow rinse _____	2 BV at regeneration flow rate
Fast rinse _____	1 to 3 BV at service flow rate

\* 1 BV (Bed Volume) = 1 m<sup>3</sup> solution per m<sup>3</sup> resin

## PERFORMANCE

Operating capacity and ionic leakage depend on several factors such as water analysis, temperature and regenerant level. The engineering data sheets EDS 0355 A, 0356 A, 0359 A, 0360 A, 0366 A and 0367 A provide information to calculate them.



## LIMITS OF USE

AMBERJET 1200 Na resin is suitable for industrial uses. For all other specific applications such as pharmaceutical, food processing or potable water applications, it is recommended that all potential

users seek advice from Rohm and Haas in order to determine the best resin choice and optimum operating conditions.

## HYDRAULIC CHARACTERISTICS

Figure 1 shows the bed expansion of AMBERJET 1200 Na resin as a function of backwash flow rate and water temperature. Figure 2 shows the pressure drop data for AMBERJET 1200 Na resin, as a function of service flow rate and water temperature. Pressure drop data are valid at the start of the service run with clear water and a correctly classified bed.

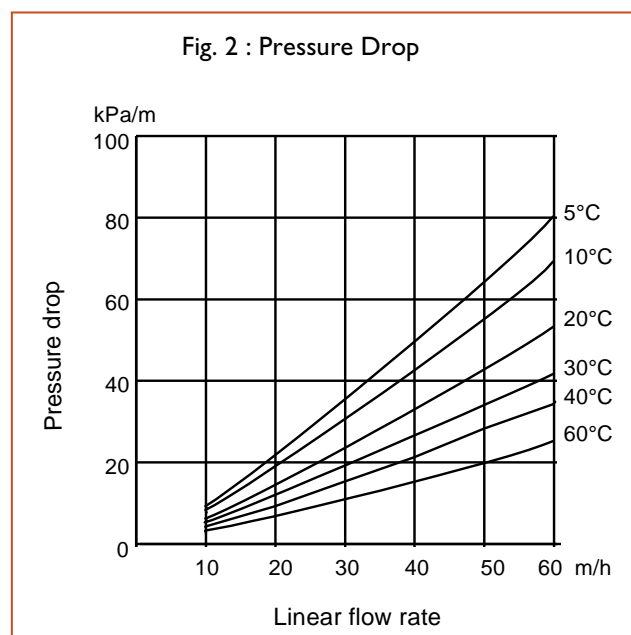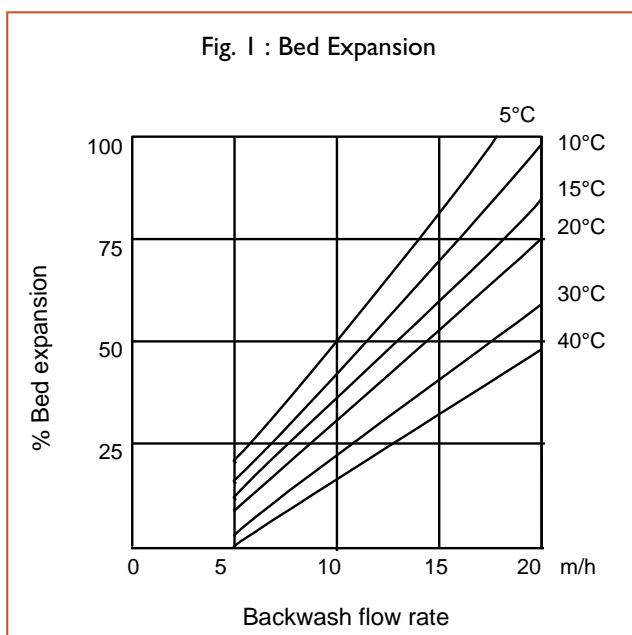

All our products are manufactured in ISO 9001 certified facilities.

Rohm and Haas/Ion Exchange Resins - Philadelphia, PA - Tel. (800) RH AMBER - Fax: (215) 409-4534  
Rohm and Haas/Ion Exchange Resins - 75579 Paris Cedex 12 - Tel. (33) 1 40 02 50 00 - Fax: 1 43 45 28 19

<http://www.amberlite.com>

**ROHM and HAAS** 

AMBERJET is a trademark of Rohm and Haas Company and its affiliates, Philadelphia, U.S.A.

Ion exchange resins and polymeric adsorbents, as produced, contain by-products resulting from the manufacturing process. The user must determine the extent to which organic by-products must be removed for any particular use and establish techniques to assure that the appropriate level of purity is achieved for that use. The user must ensure compliance with all prudent safety standards and regulatory requirements governing the application. Except where specifically otherwise stated, Rohm and Haas Company does not recommend its ion exchange resins or polymeric adsorbents, as supplied, as being suitable or appropriately pure for any particular use. Consult your Rohm and Haas technical representative for further information. Acidic and basic regenerant solutions are corrosive and should be handled in a manner that will prevent eye and skin contact. Nitric acid and other strong oxidising agents can cause explosive type reactions when mixed with Ion Exchange resins. Proper design of process equipment to prevent rapid buildup of pressure is necessary if use of an oxidising agent such as nitric acid is contemplated. Before using strong oxidising agents in contact with Ion Exchange Resins, consult sources knowledgeable in the handling of these materials.

Rohm and Haas Company makes no warranties either expressed or implied as to the accuracy or appropriateness of these data and expressly excludes any liability upon Rohm and Haas arising out of its use. We recommend that the prospective users determine for themselves the suitability of Rohm and Haas materials and suggestions for any use prior to their adoption. Suggestions for uses of our products of the inclusion of descriptive material from patents and the citation of specific patents in this publication should not be understood as recommending the use of our products in violation of any patent or as permission or license to use any patents of the Rohm and Haas Company and its affiliates. Material Safety Data Sheets outlining the hazards and handling methods for our products are available on request.